

iMachine A1-英文说明书-V1.1版本

单页成品尺寸：100x170mm 展开尺寸：400x170mm

材质：128g铜版纸 工艺：4折页（彩色正反面印刷）

Minimalist setting

Opening the intelligent business device, what you only need to do is pressing the power button, the screen lights up. Now you enter the first opening interface, you should operate following the instructions.

Package content

☒ Host 1pcs

☒ Power adapter

☒ User Manual Book  
(including packaging content, product warranty card)

Product warranty card

Product name

Product Model

Product number

Purchase date

Contact information

Company address

Contact information

Our company provide

We do not provide free warranty for the following situations

• Disassembled or repaired products without permission

• Product barcode and warranty card which is altered or incomplete

• Failure to operate the equipment in accordance with the instructions

• Failure caused by water or fall

• Failure or damage caused by an irresistible factor

• Out of warranty

Printing paper usage and preservation

1、New purchased printing paper shall avoid direct sunlight or preservation in high-temperature locations. Please don't tear packaging paper during preservation.

2、The receipt after printing shall be preserved under condition of normal temperature (about 20°C) and lucifuge. This can prolongreceipt preservation period effectively.

3、If users need to preserve receipt for a long period, please select long-acting thermosensitive printing papers.

Common troubleshooting

Symptom	Confirmed matter
Printer does not work	<div><div>• Confirm that the paper cover is closed properly</div><div>• Make sure you use the suitable paper and install it properly.</div><div>• Please check if there is 80 / 58mm thermal paper roll in the paper bin.</div><div>• When printing blank content, please check if the paper roll is in the opposite direction.</div></div>
How to do with the crash?	Long press the power button 8S, then power off, short press to reboot.

Precautions

Safety Warning

• Please insert the ac plug into the corresponding ac socket as required on the power adapter;

• Using the machine with potential explosive gas is strictly prohibited;

• Non-professionals should not open the power adapter at random so as to avoid danger;

• It is Class A product. In the living environment, this product may cause radio interference. In this case, the user may be required to take practical measures to decrease the interference.

• Battery replacement

1. There is explosion hazard when replacing batteries with a wrong type!

2. The replaced battery should be handed over to the maintenance personnel, do not put it into the fire!

Proposal

• Don't use it near water or in humid environment to avoid liquid falling into the terminal;

• Don't use it in extremely cold and hot environment to avoid small objects falling into the terminal;

• Don't use it near medical equipment without permission.

Statement

The company is not responsible for the following actions

• Damage caused by the use and maintenance beyond the scope of this guide;

• Our company will not be responsible for any damage or problems caused by the selection of materials or consumables (products which are not originally provided or approved by the company). Any one has no right to modify or change the product without the consent of our company.

Disclaimer

Due to the update of the product, some details of this document may not be in conformity with the product. Please refer to the actual material. The interpretation of this document belongs to our company.Our company reserves the right to amend this manual without prior notice.

iMachine A1

User Manual Book

Before using the product, please read the instructions carefully and keep it well.

V1.1

封底

400 mm

封面

170 mm

正面

Product introduction

Scanning head (optional)

Feed key

Main screen

Printer paper outlet

Printer paper bin cover

Main screen

Touch screen used by operator

Auxiliary display screen

A screen used for advertising

Printer paper outlet

It is used to print documents in the boot state.

Decorative cover

After opening, you can connect various kinds of wire.

Power button

• Under shut down state, short press then it would start up.

• Under the use state, long press 2-3 seconds, you can choose to shut down or restart.

• In the state of crash, long press 8 seconds, then power off.

Bell mouth

Printer cover key

Power button

USB interface

Auxiliary display screen

Decorative cover

Reset

Cardbox switch

Power interface

LAN port

USB port

Serial port

USB port

TF Card slot

Headphone port

Printer cover key

It is used to open the paper storehouse and change the paper.

USB interface

It is used for external interface, such as keyboard, mouse, U disk

TF card slot

It is used for external expansion of TF memory card(Only Android support).

Installation

1

2

3

1

2

3

1

2

3

1

2

3

1

2

3

1

2

3

1

2

3

1

2

3

Basic parameters

Operating system	Android 6.0	Windows 10
Processor	Cortex-A17architecture processor, ARM Mali-T764graphics processor	Intel Giminilake
Main Screen	14.1" Multi-touch capacitive screen/FHD1920 × 1080	
Auxiliary Screen	14.1" LCD/FHD1920 × 1080	
Storage	1GB DDR3+8GB eMMC (Upgradeable)	4GB DDR3+64GB SSD (Upgradeable)
WIFI	802.11 b/g/n(Optional)	
Bluetooth	BT4.0 BLE(Optional)	
Printer	58mm,80mm interchangeable	
Speaker	2PCS	
External interface	5*USB 2.0, 1* RJ12 serial port, 1* RJ11 cashbox port, 1* Speaker + 1* MIC	
External memorycard	Update 128GB	—
Machine size	353.2x207.1x402.7mm	
Power Adapter	Output:DC24V/2.5A	

400 mm

170 mm

反面